


1.0	machine connection: drain connection hose, DN 22 hose fitted as odour trap in interior of machine		
1.1	drain (max. 700 mm above finished floor level), DN 50		
2.0	Machine connection: fresh water supply, G 3/4"		
2.2	Soft cold water 10°C, DN 15, G 3/4 a max. 0,54 mmol/l CaCO₃ (max. 3°dH)		
	Flow rate: 5.0 l/min Minimum flow pressure: 60 kPa / 0.6 bar in front of solenoid valve Maximum pressure: 500 kPa / 5.0 bar stopcock and fine screen ≤ 25 µm		
3.0	Machine connection: electrical connection cable 5G 10mm ²		
3.1	electricity supply to the machine: 3N PE 400V ~ 50Hz nominal current / - capacity: 38.4 A / 22.9 kW		
	The master switch must be provided on site		
6.0	Heat load of warewash area The values apply for the following room conditions: Room temperature 22 °C, rel. humidity 55 %		
	Recommended suction area according to German EN 16282 o any local regulations have to be observed to determine ventilation of wash areas The total heat load includes 6.1		
6.1	Heat load of the machine in normal washing operation:		
	for 15 programme cycles/h total 6.7 kW, perceptible 4.5 kW, latent 2.2 kW		
	For the total space load, all other space loads must be considered. The space ventilation must be designed in accordance with EN 16282.		
all ca	bles, pipes etc leaving machine 1,8 m		
the p	osition of the connection piping can also be mirror-inverted!		
Mad	chine Equipment		
Tank	/ boiler locked		
(A) E	ntry height		
Final	rinse dosing unit with suction lance (blue connector)		
Feed	ing table on site		
Discharge table on site			

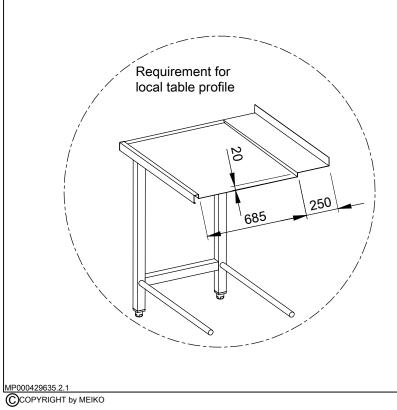

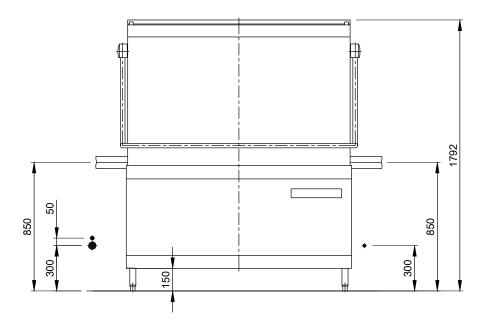

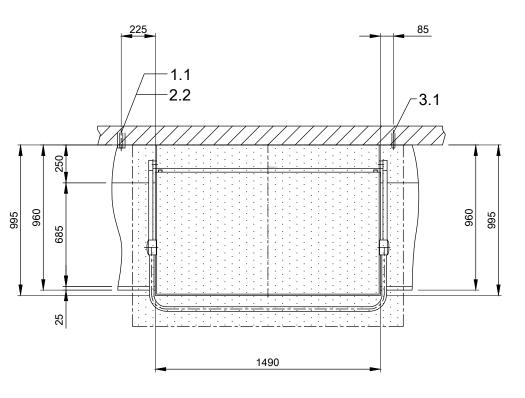

				Revis	
	MEIKO Australia-Pacific Pty Ltd			Refere	
	Unit 4, 72 - 74 Gibbes Street Chatswood NSW 2067			DIS	
	MEIKO TEL. +61-1300 367 730, Telefax +61-1300 656 420			STA	
	E-MAIL: info@meiko.com.au				
	This drawing may not be neither passed to third parties for their information or copied or used for competitive purposes without our consent. All rights reserved. We reserve the right to make changes resulting from technical progress. This drawing was computer generated and is not subject to the checking and any release process; it is also not subject to change management. Please note:				
	This document is only valid in conjunction with the conditions defined in Supplementary Sheet "Important Information". These can be requested from the manufacturer or downloaded from the Partnernet.				
				ALIC	

