



 hose fitted as odour trap in interior of machine 1.1 drain (max. 700 mm above finished floor level), DN 50 2.0 Machine connection: fresh water supply, G 3/4" 2.2 Soft cold water 10°C, DN 15, G 3/4 a max. 0,54 mmol/I CaCO₃ (max. 3°dH) Flow rate: 5 l/min Minimum flow pressure: 60 kPa / 0,6 bar in front of solenoid valve Maximum pressure: 500 kPa / 5,0 bar stopcock and fine screen ≤ 25 µm 3.0 Machine connection: electrical connection cable 5G 2,5mm² 3.1 electricity supply to the machine: 3N PE 400V ~ 50Hz nominal current / - capacity: 19,6 A / 10,6 kW Fuse protection: 20 A ♦ Voltage equalising cable The master switch must be provided on site Electrical equipment suitable for supply voltage: 3N PE 380-415 V 50 Hz 6.0 Heat load of warewash area The values apply for the following room conditions: Room temperature 22 °C, rel. humidity 55 % Recommended suction area according to German EN 16282 or any local regulations have to be observed to determine ventilation of wash areas The total heat load of the machine in normal washing operation: for 25 programme cycles/h total 2,7 kW, perceptible 1,8 kW, latent 0,9 kW For the total space load, all other space loads must be considered. The space ventilation must be designed in accordance with EN 16282. all cables, pipes etc leaving machine 1,4 m the position of the connection piping can also be mirror-inverted! Height adjustable: machine feet +/- 30 mm, MEIKO table feet +/- 15 mm Machine Equipment A) Entry height D) Rinse agent pipe and suction lance E) Detergent dosing unit with suction lance 	Ссор	YRIGHT by MEIKO								
 Machine connection: fresh water supply, G 3/4" 2.2 Soft cold water 10°C, DN 15, G 3/4 a max. 0,54 mmol/I CaCO₃ (max. 3°dH) Flow rate: 5 l/min Minimum flow pressure: 60 kPa / 0,6 bar in front of solenoid valve Maximum pressure: 500 kPa / 5,0 bar stopcock and fine screen ≤ 25 µm 3.0 Machine connection: electrical connection cable 5G 2,5mm² 3.1 electricity supply to the machine: 3N PE 400V ~ 50Hz nominal current / - capacity: 19,6 A / 10,6 kW Fuse protection: 20 A ◇ Voltage equalising cable The master switch must be provided on site Electrical equipment suitable for supply voltage: 3N PE 380-415 V 50 Hz 6.0 Heat load of warewash area The values apply for the following room conditions: Room temperature 22 °C, rel. humidity 55 % Recommended suction area according to German EN 16282 or any local regulations have to be observed to determine ventilation of wash areas The total heat load of the machine in normal washing operation: for 25 programme cycles/h total 2,7 kW, perceptible 1,8 kW, latent 0,9 kW For the total space load, all other space loads must be considered. The space ventilation must be designed in accordance with EN 16282. all cables, pipes et leaving machine 1,4 m the position of the connection piping can also be mirror-inverted! Height adjustable: machine feet +/- 30 mm, MEIKO table feet +/- 15 mm Machine Equipment A) Entry height D) Rinse agent pipe and suction lance Feeding table on site 	1.0									
 Soft cold water 10°C, DN 15, G 3/4 a max. 0,54 mmol/l CaCOs (max. 3°dH) Flow rate: 5 l/min Minimum flow pressure: 60 kPa / 0,6 bar in front of solenoid valve Maximum pressure: 500 kPa / 5,0 bar stopcock and fine screen ≤ 25 µm Machine connection: electrical connection cable 5G 2,5mm² electricity supply to the machine: 3N PE 400V ~ 50Hz nominal current / - capacity: 19,6 A / 10,6 kW Fuse protection: 20 A Voltage equalising cable The master switch must be provided on site Electrical equipment suitable for supply voltage: 3N PE 380-415 V 50 Hz Heat load of warewash area The values apply for the following room conditions: Room temperature 22 °C, rel. humidity 55 % Recommended suction area according to German EN 16282 or any local regulations have to be observed to determine ventilation of wash areas The total heat load includes 6.1 Heat load of the machine in normal washing operation: for 25 programme cycles/h total 2,7 kW, perceptible 1,8 kW, latent 0,9 kW For the total space load, all other space loads must be considered. The space ventilation must be designed in accordance with EN 16282. all cables, pipes etc leaving machine 1,4 m the position of the connection piping can also be mirror-inverted! Height adjustable: machine feet +/- 30 mm, MEIKO table feet +/- 15 mm Machine Equipment A) Entry height D) Rinse agent pipe and suction lance Feeding table on site 	1.1									
 max. 0,54 mmol/l CaCO₃ (max. 3°dH) Flow rate: 5 l/min Minimum flow pressure: 60 kPa / 0,6 bar in front of solenoid valve Maximum pressure: 500 kPa / 5,0 bar stopcock and fine screen ≤ 25 µm 3.0 Machine connection: electrical connection cable 5G 2,5mm² 3.1 electricity supply to the machine: 3N PE 400V ~ 50Hz nominal current / - capacity: 19,6 A / 10,6 kW Fuse protection: 20 A Voltage equalising cable The master switch must be provided on site Electrical equipment suitable for supply voltage: 3N PE 380-415 V 50 Hz 6.0 Heat load of warewash area The values apply for the following room conditions: Room temperature 22 °C, rel. humidity 55 % Recommended suction area according to German EN 16282 or any local regulations have to be observed to determine ventilation of wash areas The total heat load includes 6.1 6.1 Heat load of the machine in normal washing operation: for 25 programme cycles/h total 2,7 kW, perceptible 1,8 kW, latent 0,9 kW For the total space load, all other space loads must be considered. The space ventilation must be designed in accordance with EN 16282. all cables, pipes etc leaving machine 1,4 m the position of the connection piping can also be mirror-inverted! Height adjustable: machine feet +/- 30 mm, MEIKO table feet +/- 15 mm Machine Equipment A) Entry height D) Rinse agent pipe and suction lance E Detergent dosing unit with suction lance Feeding table on site 	2.0									
 Flow rate: 5 l/min Minimum flow pressure: 60 kPa / 0,6 bar in front of solenoid valve Maximum pressure: 500 kPa / 5,0 bar stopcock and fine screen ≤ 25 µm 3.0 Machine connection: electrical connection cable 5G 2,5mm² 3.1 electricity supply to the machine: 3N PE 400V ~ 50Hz nominal current / - capacity: 19,6 A / 10,6 kW Fuse protection: 20 A ④ Voltage equalising cable The master switch must be provided on site Electrical equipment suitable for supply voltage: 3N PE 380-415 V 50 Hz 6.0 Heat load of warewash area The values apply for the following room conditions: Room temperature 22 °C, rel. humidity 55 % ■ Recommended suction area according to German EN 16282 or any local regulations have to be observed to determine ventilation of wash areas The total heat load of includes 6.1 6.1 Heat load of the machine in normal washing operation: for 25 programme cycles/h total 2,7 kW, perceptible 1,8 kW, latent 0,9 kW For the total space load, all other space loads must be considered. The space ventilation must be designed in accordance with EN 16282. all cables, pipes etc leaving machine 1,4 m the position of the connection piping can also be mirror-inverted! Height adjustable: machine feet +/- 30 mm, MEIKO table feet +/- 15 mm Machine Equipment A) Entry height D) Rinse agent pipe and suction lance Feeding table on site 	2.2	Soft cold water 10°C, DN 15, G 3/4 a								
 Minimum flow pressure: 60 kPa / 0,6 bar in front of solenoid valve Maximum pressure: 500 kPa / 5,0 bar stopcock and fine screen ≤ 25 µm 3.0 Machine connection: electrical connection cable 5G 2,5mm² 3.1 electricity supply to the machine: 3N PE 400V ~ 50Hz nominal current / - capacity: 19,6 A / 10,6 kW Fuse protection: 20 A ♦ Voltage equalising cable The master switch must be provided on site Electrical equipment suitable for supply voltage: 3N PE 380-415 V 50 Hz 6.0 Heat load of warewash area The values apply for the following room conditions: Room temperature 22 °C, rel. humidity 55 % Recommended suction area according to German EN 16282 or any local regulations have to be observed to determine ventilation of wash areas The total heat load includes 6.1 6.1 Heat load of the machine in normal washing operation: for 25 programme cycles/h total 2,7 kW, perceptible 1,8 kW, latent 0,9 kW For the total space load, all other space loads must be considered. The space ventilation must be designed in accordance with EN 16282. all cables, pipes etc leaving machine 1,4 m the position of the connection piping can also be mirror-inverted! Height adjustable: machine feet +/- 30 mm, MEIKO table feet +/- 15 mm Machine Equipment A) Entry height D) Rinse agent pipe and suction lance E Detergent dosing unit with suction lance Feeding table on site 										
 a.1 electricity supply to the machine: 3N PE 400V ~ 50Hz nominal current / - capacity: 19,6 A / 10,6 kW Fuse protection: 20 A ♦ Voltage equalising cable The master switch must be provided on site Electrical equipment suitable for supply voltage: 3N PE 380-415 V 50 Hz 6.0 Heat load of warewash area The values apply for the following room conditions: Room temperature 22 °C, rel. humidity 55 % ■ Recommended suction area according to German EN 16282 or any local regulations have to be observed to determine ventilation of wash areas The total heat load includes 6.1 6.1 Heat load of the machine in normal washing operation: for 25 programme cycles/h total 2,7 kW, perceptible 1,8 kW, latent 0,9 kW For the total space load, all other space loads must be considered. The space ventilation must be designed in accordance with EN 16282. all cables, pipes etc leaving machine 1,4 m the position of the connection piping can also be mirror-inverted! deight adjustable: machine feet +/- 30 mm, MEIKO table feet +/- 15 mm Machine Equipment A) Entry height D) Rinse agent pipe and suction lance E Detergent dosing unit with suction lance Feeding table on site 		Minimum flow pressure: 60 kPa / 0,6 bar in front of solenoid valve Maximum pressure: 500 kPa / 5,0 bar								
nominal current / - capacity: 19,6 A / 10,6 kW Fuse protection: 20 A	3.0	Machine connection: electrical connection cable 5G 2,5mm ²								
Fuse protection: 20 Å	3.1	electricity supply to the machine: 3N PE 400V ~ 50Hz								
 Voltage equalising cable The master switch must be provided on site Electrical equipment suitable for supply voltage:										
The master switch must be provided on site Electrical equipment suitable for supply voltage: 3N PE 380-415 V 50 Hz 6.0 Heat load of warewash area The values apply for the following room conditions: Room temperature 22 °C, rel. humidity 55 % Image: Recommended suction area according to German EN 16282 or any local regulations have to be observed to determine ventilation of wash areas The total heat load includes 6.1 6.1 Heat load of the machine in normal washing operation: for 25 programme cycles/h total 2,7 kW, perceptible 1,8 kW, latent 0,9 kW For the total space load, all other space loads must be considered. The space ventilation must be designed in accordance with EN 16282. all cables, pipes etc leaving machine 1,4 m the position of the connection piping can also be mirror-inverted! Height adjustable: machine feet +/- 30 mm, MEIKO table feet +/- 15 mm Machine Equipment (A) Entry height (D) Rinse agent pipe and suction lance (E) Detergent dosing unit with suction lance Feeding table on site										
Electrical equipment suitable for supply voltage: 3N PE 380-415 V 50 Hz 6.0 Heat load of warewash area The values apply for the following room conditions: Room temperature 22 °C, rel. humidity 55 % Image: Recommended suction area according to German EN 16282 or any local regulations have to be observed to determine ventilation of wash areas The total heat load includes 6.1 6.1 Heat load of the machine in normal washing operation: for 25 programme cycles/h total 2,7 kW, perceptible 1,8 kW, latent 0,9 kW For the total space load, all other space loads must be considered. The space ventilation must be designed in accordance with EN 16282. all cables, pipes etc leaving machine 1,4 m the position of the connection piping can also be mirror-inverted! Height adjustable: machine feet +/- 30 mm, MEIKO table feet +/- 15 mm Machine Equipment (A) Entry height (D) Rinse agent pipe and suction lance (E) Detergent dosing unit with suction lance Feeding table on site		· · · · · ·								
 3N PE 380-415 V 50 Hz 6.0 Heat load of warewash area The values apply for the following room conditions: Room temperature 22 °C, rel. humidity 55 % Recommended suction area according to German EN 16282 or any local regulations have to be observed to determine ventilation of wash areas The total heat load includes 6.1 6.1 Heat load of the machine in normal washing operation: for 25 programme cycles/h total 2,7 kW, perceptible 1,8 kW, latent 0,9 kW For the total space load, all other space loads must be considered. The space ventilation must be designed in accordance with EN 16282. all cables, pipes etc leaving machine 1,4 m the position of the connection piping can also be mirror-inverted! Height adjustable: machine feet +/- 30 mm, MEIKO table feet +/- 15 mm Machine Equipment A) Entry height D) Rinse agent pipe and suction lance E) Detergent dosing unit with suction lance Feeding table on site 										
 The values apply for the following room conditions: Room temperature 22 °C, rel. humidity 55 % Recommended suction area according to German EN 16282 or any local regulations have to be observed to determine ventilation of wash areas The total heat load includes 6.1 6.1 Heat load of the machine in normal washing operation: for 25 programme cycles/h total 2,7 kW, perceptible 1,8 kW, latent 0,9 kW For the total space load, all other space loads must be considered. The space ventilation must be designed in accordance with EN 16282. all cables, pipes etc leaving machine 1,4 m the position of the connection piping can also be mirror-inverted! Height adjustable: machine feet +/- 30 mm, MEIKO table feet +/- 15 mm Machine Equipment A) Entry height D) Rinse agent pipe and suction lance E) Detergent dosing unit with suction lance Feeding table on site 										
any local regulations have to be observed to determine ventilation of wash areas The total heat load includes 6.1 6.1 Heat load of the machine in normal washing operation: for 25 programme cycles/h total 2,7 kW, perceptible 1,8 kW, latent 0,9 kW For the total space load, all other space loads must be considered. The space ventilation must be designed in accordance with EN 16282. all cables, pipes etc leaving machine 1,4 m the position of the connection piping can also be mirror-inverted! Height adjustable: machine feet +/- 30 mm, MEIKO table feet +/- 15 mm Machine Equipment (A) Entry height (D) Rinse agent pipe and suction lance (E) Detergent dosing unit with suction lance Feeding table on site	6.0	The values apply for the following room conditions:								
for 25 programme cycles/h total 2,7 kW, perceptible 1,8 kW, latent 0,9 kW For the total space load, all other space loads must be considered. The space ventilation must be designed in accordance with EN 16282. all cables, pipes etc leaving machine 1,4 m the position of the connection piping can also be mirror-inverted! Height adjustable: machine feet +/- 30 mm, MEIKO table feet +/- 15 mm Machine Equipment (A) Entry height (D) Rinse agent pipe and suction lance (E) Detergent dosing unit with suction lance Feeding table on site		any local regulations have to be observed to determine ventilation of wash areas								
total 2,7 kW, perceptible 1,8 kW, latent 0,9 kW For the total space load, all other space loads must be considered. The space ventilation must be designed in accordance with EN 16282. all cables, pipes etc leaving machine 1,4 m the position of the connection piping can also be mirror-inverted! Height adjustable: machine feet +/- 30 mm, MEIKO table feet +/- 15 mm Machine Equipment (A) Entry height (D) Rinse agent pipe and suction lance (E) Detergent dosing unit with suction lance Feeding table on site	6.1	Heat load of the machine in normal washing operation:								
The space ventilation must be designed in accordance with EN 16282. all cables, pipes etc leaving machine 1,4 m the position of the connection piping can also be mirror-inverted! Height adjustable: machine feet +/- 30 mm, MEIKO table feet +/- 15 mm Machine Equipment (A) Entry height (D) Rinse agent pipe and suction lance (E) Detergent dosing unit with suction lance Feeding table on site										
the position of the connection piping can also be mirror-inverted! Height adjustable: machine feet +/- 30 mm, MEIKO table feet +/- 15 mm Machine Equipment (A) Entry height (D) Rinse agent pipe and suction lance (E) Detergent dosing unit with suction lance Feeding table on site	For the total space load, all other space loads must be considered. The space ventilation must be designed in accordance with EN									
Height adjustable: machine feet +/- 30 mm, MEIKO table feet +/- 15 mm Machine Equipment (A) Entry height (D) Rinse agent pipe and suction lance (E) Detergent dosing unit with suction lance Feeding table on site	all cal	bles, pipes etc leaving machine 1,4 m								
Machine Equipment (A) Entry height (D) Rinse agent pipe and suction lance (E) Detergent dosing unit with suction lance Feeding table on site	the po	osition of the connection piping can also be mirror-inverted!								
A) Entry height (D) Rinse agent pipe and suction lance (E) Detergent dosing unit with suction lance Feeding table on site	Height adjustable: machine feet +/- 30 mm, MEIKO table feet +/- 15 mm									
A) Entry height (D) Rinse agent pipe and suction lance (E) Detergent dosing unit with suction lance Feeding table on site	Mac	chine Equipment								
E) Detergent dosing unit with suction lance Feeding table on site	(A) Entry height									
eeding table on site	(D) Rinse agent pipe and suction lance									
	(E) Detergent dosing unit with suction lance									
Discharge table on site	Feeding table on site									
	Disch	arge table on site								


~	
COPYRIGHT by MEIKO	

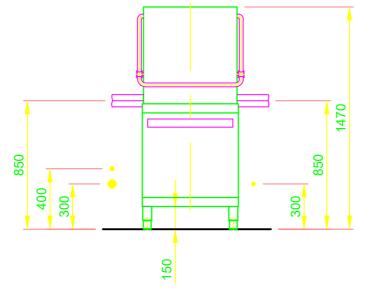

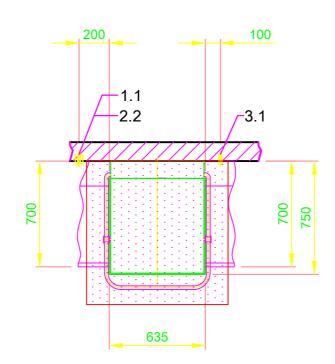

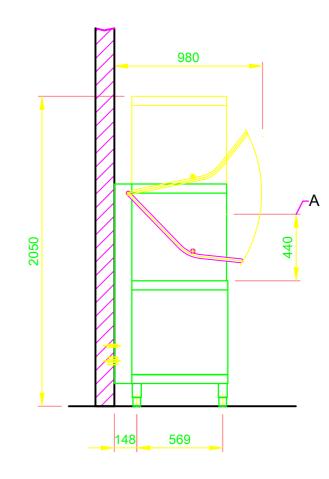

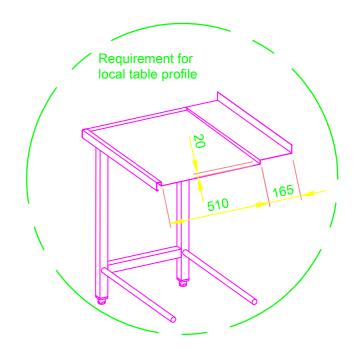

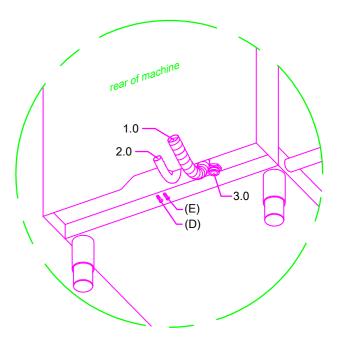

				Revision				_			
	MEIKO AUSTRIA GMBH HETMANEKGASSE 1B, A-1230 WIEN TEL. +43 1 6992039 TELEFAX +43 1 0 E-MAIL: office@meiko.at			Reference DISHWASHER STANDARD DRAWING / HUN				^{Type} UPSTER H 500 M2			
	make changes resulting from technical progress. This drawing was computer generated and is not subject to the checking and any release process; it is also not subject to change			TYPE: Drawing-No S0008).		RY	Order-No.			
	his document is only valid in conjunction with the conditions defined in Supplementary neet "Important Information". These can be requested from the manufacturer or winloaded from the Partnernet.			Scale 1:25	drawn 11.08	: 3.2020	m-iplan	checked: 11.08.2020	m-iplan		
0				HUN		EN			COPYR	IGHT by ME	IKO