

## UPster K-M250S with drying zone with Thermolabel test

### Rack type dishwashing machine - a modular solution.

- Maximum cleaning quality in a compact format: 3 standard speeds incorporated (with the possibility to speed up or slow down each speed) to fine tune the washing performance to the customer needs.
- Hinged side-opening doors enable installation under low ceilings whilst still maintaining ease of cleaning.
- All models can have the direction reversed on-site, whether from right to left or left to right.
- Programmable touch screen control panel with blue tooth connectivity.
- Increased opening height of more than 500mm to larger items such as gastronorm containers, larger pots & pans, canteen trays etc.
- Fully 304/316 AISI stainless steel construction with complete insulation.



### Execution for: Saudi Arabia

#### Rack type dishwashing machine


Working direction: left - right

Power supply: 3N PE 380V 60Hz

Heating: Electric

Water connection: Soft - warm water 25 - 49°C

**Total connected load: 37.7 kW**

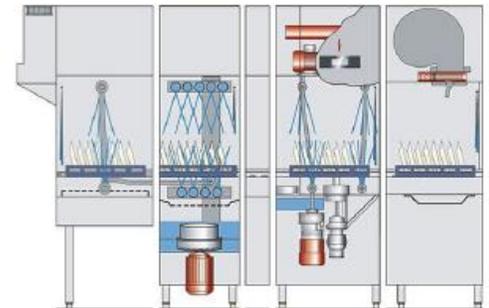

**K-M250S with drying zone (600 mm)**

### Technical data

<b>Rack capacity/h (theoretical)</b>	125 / 190 / 250 racks/h
Transport speed	3 speed
<b>Rack dimension</b>	500 x 500 mm
<b>Entry height</b>	508 mm
<b>Machine length</b>	2500 mm with drying zone
<b>Dimensions of machine</b>	
Prewash section	600 mm
Wash tank	500 mm
Contact-plus zone	150 mm
Discharge tunnel (Pump rinse section)	650 mm
1. Drying section (TR)	600 mm
<b>Total</b>	<b>2500 mm</b>
<b>Motors (Total)</b>	4.5 kW
<b>Heating energies (Total)</b>	33.2 kW
<b>Electrical feeding cable</b>	
Power supply	3N PE 380V 60Hz
Total connected load	37.7 kW
max. rated current	61.8 A
Max. Elect. cable cross-section	35 mm <sup>2</sup>

### Consumption

Average consumption during typical operation 26 kW

### Water connection: soft warm water

Fresh water final rinse 25 - 49°C  
 Tank filling 260 l/h  
 90 l

### Exhaust air values

Exhaust air volume approx. 150 m<sup>3</sup>/h  
 Exhaust air temperature approx. 35 °C

### Heat load

Total 6.6 kW  
 Perceptible 3.3 kW  
 Latent 3.3 kW

### Equipment

Exhaust air channel with active fan  
 Thermolabel

## UPster K

### HIGHLIGHTS




- **Outstanding dishwashing performance** and top-quality cleaning results in a compact package
- **Three choices of rack capacity** – so you can choose the perfect solution for your wash-up area
- **Glass display panel at eye level** made of safety glass which is easy to keep hygienically clean
- **Intuitive design (glass display panel)** – provides maximum assistance to users
- **Intuitive design (cleaning)** – provides maximum assistance to users
- **Bluetooth interface** – modern, innovative communication technology
- **Hinged doors** in the wash zone provide easy access to the wash arms
- With the most **generous passing height (508 mm)** of any rack type dishwashing machine in its class, it gets even bulky items of dishware sparkling clean.

### ALL-INCLUSIVE PACKAGE


- Autotimer  
Maximum efficiency: saves water, energy and chemicals
- System to reduce rinse aid use  
Reduces rinse aid costs by up to 70 %
- **Stainless steel manifold wash systems with 9 wash arms and non-blocking wash nozzles.**

- Stainless steel wash pump, impeller and ascending pipe  
Durable, high-quality and efficient
- Stainless steel wash and rinse arms  
Durable and high-quality with a consistent spray pattern
- **Control cabinet on front of machine**  
Perfectly positioned for fast and cost-effective servicing and maintenance.
- **Emergency stop**  
At an ergonomic height, ensures safe operation
- **Thermally insulated door handles**  
Never get too hot, can be used at any time
- **Door monitoring switch**  
Machine switches off when door is opened, ensures safe operation
- **Device to protect against pollution of potable water line, with pressure pump**  
Maximum operating reliability and optimum hygiene (EN1717 compliant) regardless of any fluctuations in pressure on site, consistent spray pattern
- **Floor clearance 150 mm**  
Makes cleaning easier
- **Double-walled construction and door insulation**  
Minimizes the heat and noise emitted by the machine
- **Electrical connections (potential-free contacts)**  
For on-site ventilation

Type code: KF-M EV6 N-0-15 AT65P	
1.0	Tank drain DN 50, Ø 55 a, Connection pipe work and P-trap to be provided locally (DN 70)
2.0	Water connection of the machine: Soft - warm water 25 - 49°C (resp. reverse osmosis or demi-water), DN 20, G 3/4 a max. 0,54 mmol/l CaCO <sub>3</sub> (max. 3°dH) consumption approx. 260 l/h for final rinse consumption approx. 90 l for tank filling
3.0	Electrical connection of the machine: 3N PE 380V ~ 60Hz Connected load for peak: 61.8 A nominal current / - capacity: 61.8 A / 37.7 kW Max. Elect. cable cross-section: 35 mm <sup>2</sup> free cable end from finished floor level/Wall: approx. 4 m ⚡ Voltage equalising cable The master switch must be provided on site
6.0	Heat load of warewash area The values apply for the following room conditions: Room temperature 22 °C, rel. humidity 55 % Distribution of the total heat load (machine 6.1 and washware 6.2) onto the suction surfaces during the washing operation. (Recommended suction surfaces in accordance with EN 16282): 6.01: approx. 67% 6.02: approx. 33%
6.1	Heat load of the machine in normal washing operation: Latent: 3.3 kW, perceptible: 3.3 kW, total: 6.6 kW At a freshwater supply temperature of approx. 12°C
6.2	The heat load of the wash ware must be considered separately. For the total space load, all other space loads must be considered. The space ventilation must be designed in accordance with EN 16282.
	Recommended area for local supply lines (water, drain, electricity)
	Separation
<b>Machine Equipment</b>	
Exhaust air channel with active fan	
Drying	
Thermolabel	
Feeding table on site	
Discharge table on site	

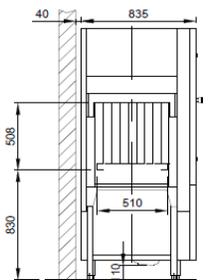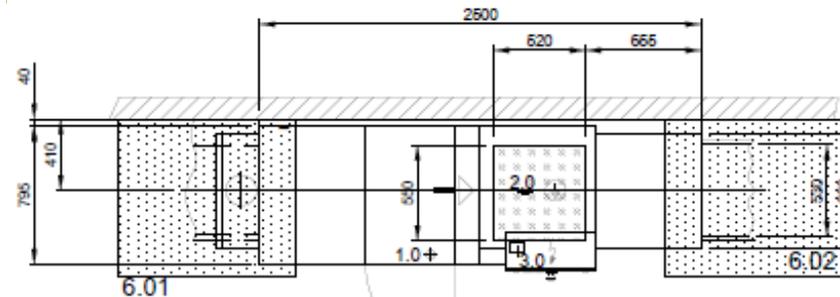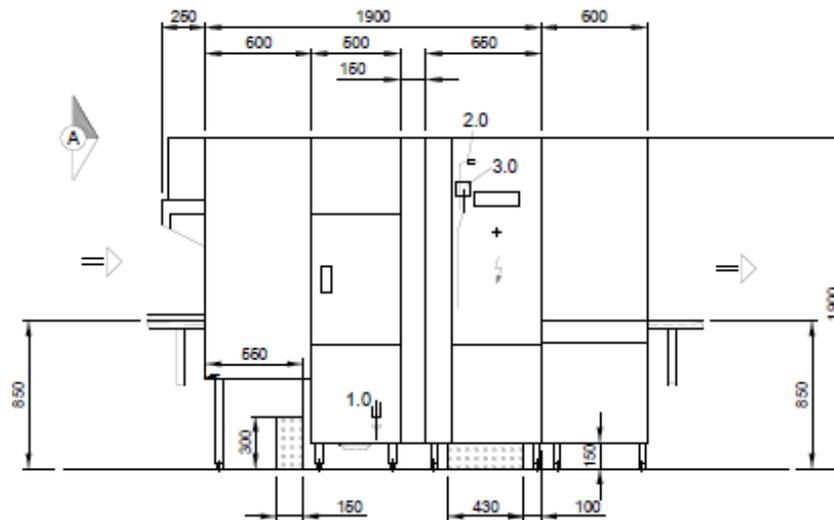

ELEVATION VIEW A

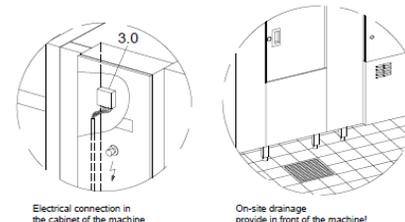

Electrical connection in the cabinet of the machine

On-site drainage provide in front of the machine!

<p>MEIKO MIDDLE EAST FZE GoldDiamond Park, Building#0, office #206 P.O. Box 252085, 1, A.E. - Dubai Phone +971 43 41 51 72 E-MAIL: wsl@meiko.de</p>	Revision	Type
	<p>Reference: UPSTER STANDARD DRAWING / SAU</p>	<p>UPSTER K-M 250-S L-R ELECTRO</p>
<p>The drawing may not be further passed to third parties for their information or copied or used for competitive purposes without our consent. All rights reserved. We reserve the right to make changes resulting from technical progress. This drawing was computer generated and is not subject to the checking and any release process. It is also not subject to change management.</p> <p>Please note: This document is only valid in conjunction with the conditions defined in Supplementary Sheet "Important Information". These can be requested from the manufacturer.</p>	<p>Drawing No: S00085281</p>	<p>Order No.</p>
<p>Scale: 1:25</p>	<p>Drawn: 22.07.2020 m-plan</p>	<p>checked: 22.07.2020 m-plan</p>
<p>© COPYRIGHT BY MEIKO</p>	<p>SAU EN</p>	<p>© COPYRIGHT BY MEIKO</p>