


Ссор	YRIGHT by MEIKO						
1.0	machine connection: drain connection hose, DN 22 hose fitted as odour trap in interior of machine						
1.1	drain (max. 300 mm above finished floor level), DN 50						
2.0	Machine connection: fresh water supply, G 3/4"						
2.5	Cold water 10°C, 20 DN, G 3/4 a Flow rate: total 4.3 l/min (at 15 °C inlet temperature and a flow pressure of 200 kPa / 2 bar) electrical conductibility < 1000 $\mu$ S/cm Minimum flow pressure: 100 kPa / 1.0 bar in front of solenoid valve Maximum pressure: 500 kPa / 5.0 bar in front of pressure reducer stopcock and fine screen $\leq$ 25 $\mu$ m						
3.0	Machine connection: electrical connection cable 5G 4.0mm <sup>2</sup>						
3.1	electricity supply to the machine: 3N PE 400V ~ 50Hz nominal current / - capacity: 19.6 A / 12.4 kW Fuse protection: 25 A Voltage equalising cable						
6.0	Heat load of warewash area						
6.1	for 6 programme cycles/h total 0.6 kW, perceptible 0.4 kW, latent 0.2 kW						
all ca	bles, pipes etc leaving machine 1,4 m						
the po	osition of the connection piping can also be mirror-inverted!						
Mac	chine Equipment						
Thern	nal disinfection						
(A) Entry height							
Rinse	se agent pipe and suction lance with empty indicator (blue connector)						
Deter	ergent pipe and suction lance with empty indicator						
GiO N	MODULE (plinth, 120 mm)						
A0-60	0-60						
Back	Back wall cladding						
	Please observe the installation indications of the additional document MP_T-INFO-GIO_EN.pdf						






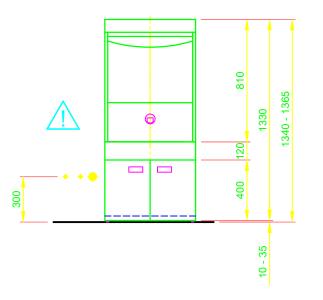

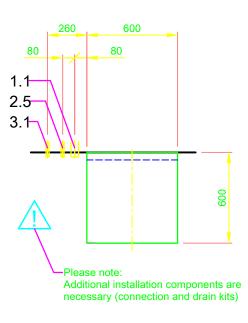

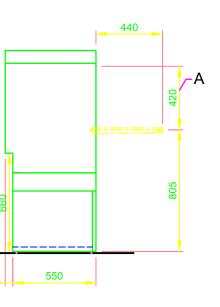

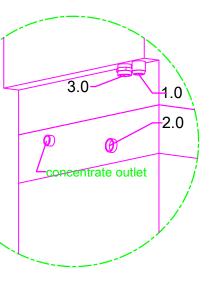

ision						
rence PCI ANE			VING / ISR	Type TOPCLEAN 60 M2 GIO MODULE PL A0-60	INTH	
ving-No. 0088534				Order-No.		
cale	draw	/n:		checked:		
:25	11.	08.2020	m-iplan	11.08.2020 m-iplan		
		EN		COPYF	RIGHT by M	IEIKO