

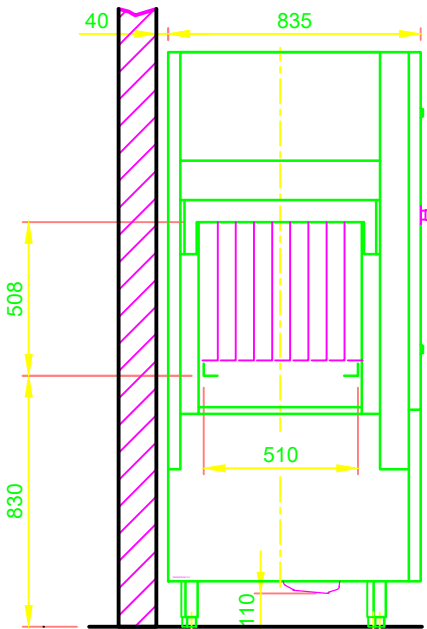
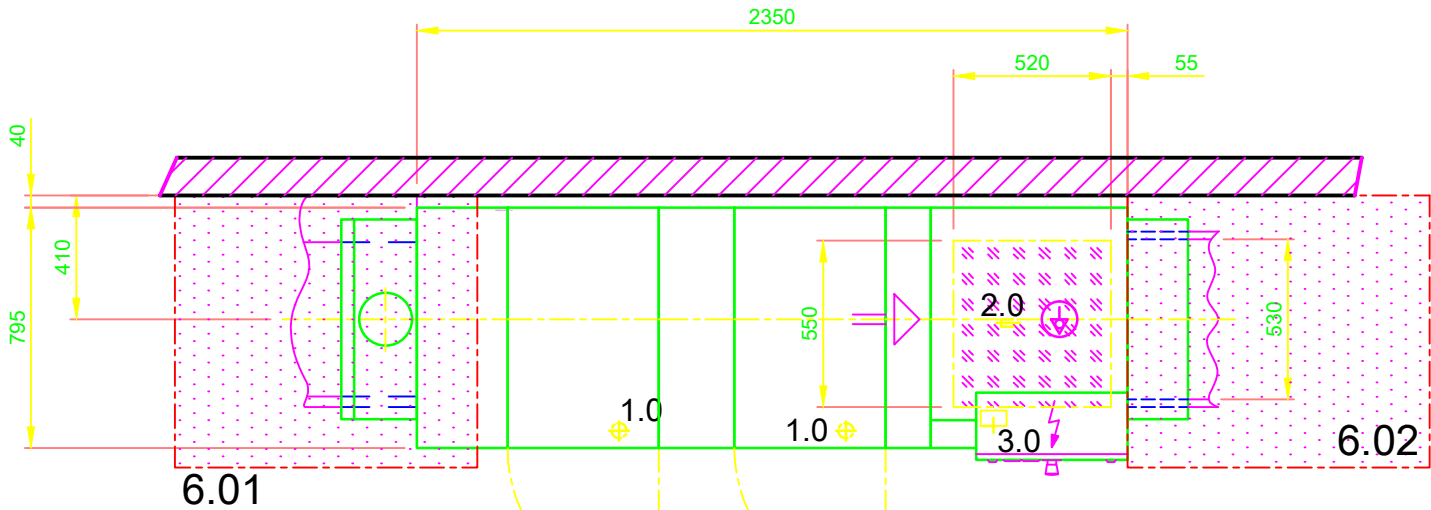



|                                     |                                                                                                                                                                                                                                                                                                                                                                       |
|-------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Type code: KF-M E3 WTV N25-15 AT65P |                                                                                                                                                                                                                                                                                                                                                                       |
| 1.0                                 | Tank drain DN 50, Ø 55 a, Connection pipe work and P-trap to be provided locally (DN 70)                                                                                                                                                                                                                                                                              |
| 2.0                                 | Water connection of the machine:<br>Soft cold water 12 - 24°C, DN 20, G 3/4 a<br>max. 0,54 mmol/l CaCO <sub>3</sub> (max. 3°dH)<br>consumption approx. 260 l/h for final rinse<br>consumption approx. 170 l for tank filling                                                                                                                                          |
| 3.0                                 | Electrical connection of the machine: 3N PE 400V ~ 50Hz<br>Connected load for peak: 47,9 A<br>nominal current / - capacity: 47,9 A / 29,7 kW<br>Max. Elect. cable cross-section: 35 mm <sup>2</sup><br>free cable end from finished floor level/Wall: approx. 4 m<br>⚡ Voltage equalising cable<br>The master switch must be provided on site                         |
| 6.0                                 | Heat load of warewash area<br>The values apply for the following room conditions:<br>Room temperature 22 °C, rel. humidity 55 %<br>Distribution of the total heat load (machine 6.1 and washware 6.2)<br>onto the suction surfaces during the washing operation.<br>(Recommended suction surfaces in accordance with EN 16282):<br>6.01: approx. 67% 6.02: approx.33% |
| 6.1                                 | Heat load of the machine in normal washing operation:<br>Latent: 2,4 kW, perceptible: 3,4 kW, total: 5,8 kW<br>At a freshwater supply temperature of approx. 12°C                                                                                                                                                                                                     |
| 6.2                                 | The heat load of the wash ware must be considered separately.                                                                                                                                                                                                                                                                                                         |
|                                     | For the total space load, all other space loads must be considered.<br>The space ventilation must be designed in accordance with EN 16282.                                                                                                                                                                                                                            |
|                                     | Recommended area for local supply lines (water, drain, electricity)                                                                                                                                                                                                                                                                                                   |
|                                     | Separation                                                                                                                                                                                                                                                                                                                                                            |
| Machine Equipment                   |                                                                                                                                                                                                                                                                                                                                                                       |
| Exhaust air heat recovery           |                                                                                                                                                                                                                                                                                                                                                                       |
| Feeding table on site               |                                                                                                                                                                                                                                                                                                                                                                       |
| Discharge table on site             |                                                                                                                                                                                                                                                                                                                                                                       |

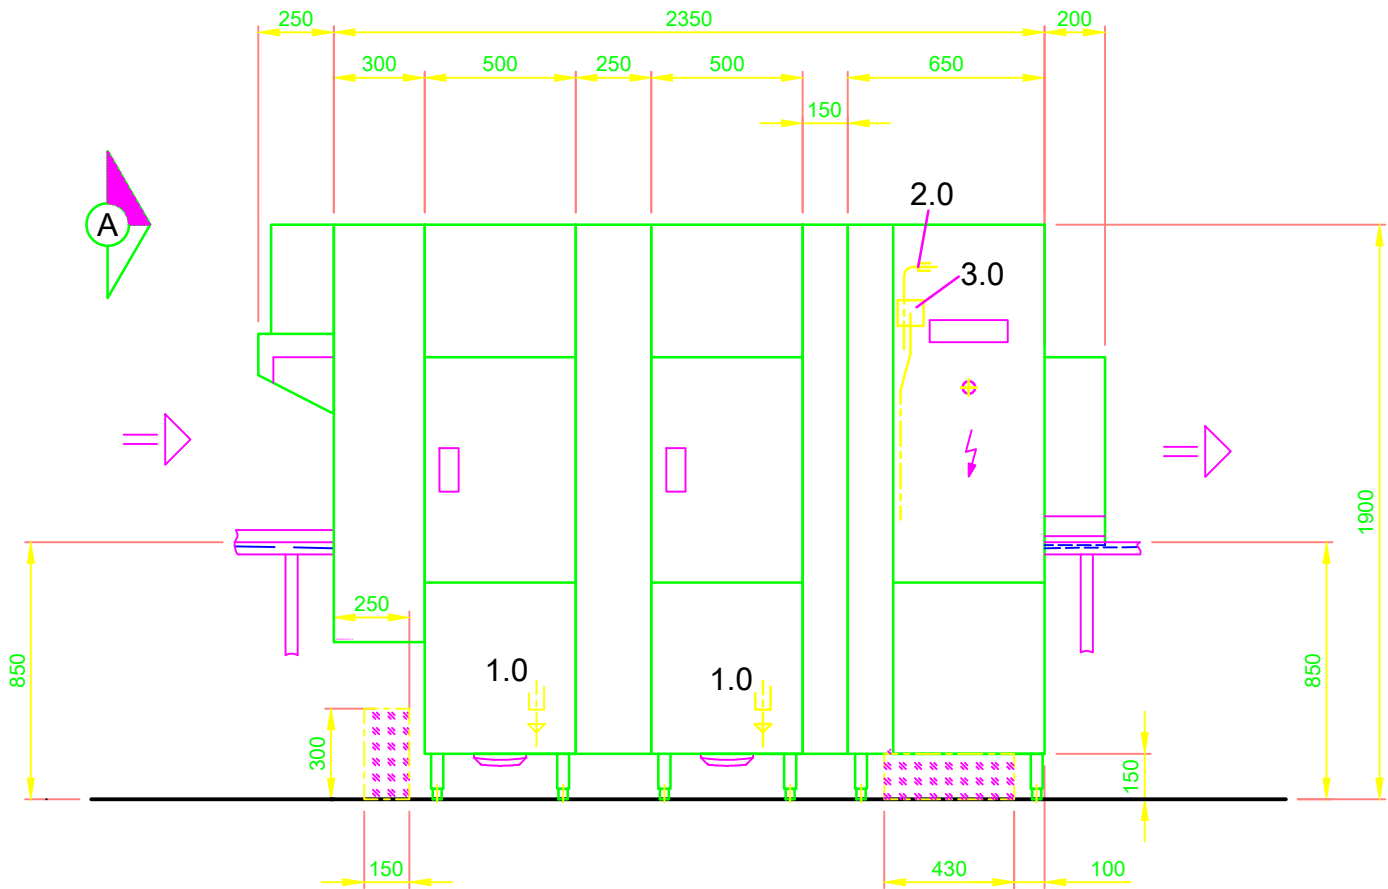

ELEVATION VIEW A

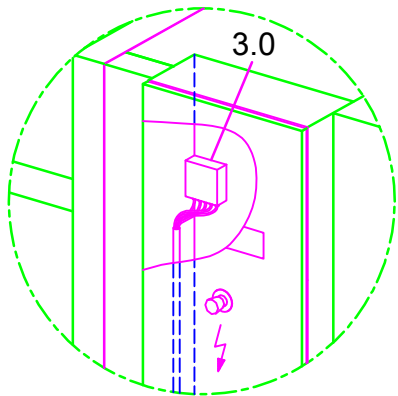

Electrical connection in the cabinet of the machine

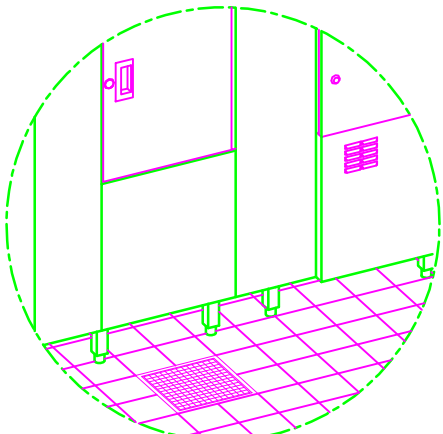

On-site drainage provide in front of the machine!



MEIKO AUSTRIA GMBH  
HETMANEKGASSE 1B, A-1230 WIEN  
TEL. +43 1 6992039 TELEFAX +43 1 699203923  
E-MAIL: office@meiko.at

This drawing may not be neither passed to third parties for their information or copied or used for competitive purposes without our consent. All rights reserved. We reserve the right to make changes resulting from technical progress. This drawing was computer generated and is not subject to the checking and any release process; it is also not subject to change management.  
Please note:  
This document is only valid in conjunction with the conditions defined in Supplementary Sheet "Important Information". These can be requested from the manufacturer or downloaded from the Partnernet.

|             |                               |           |                    |
|-------------|-------------------------------|-----------|--------------------|
| Revision    |                               | Type      | UPSTER K-M 280     |
| Reference   | UPSTER STANDARD DRAWING / CZE | L-R       | ELECTRO            |
| Drawing-No. | S00087790                     | Order-No. |                    |
| Scale       | 1:25                          | checked:  | 08.08.2020 m-iplan |
| drawn:      | 08.08.2020 m-iplan            |           |                    |