
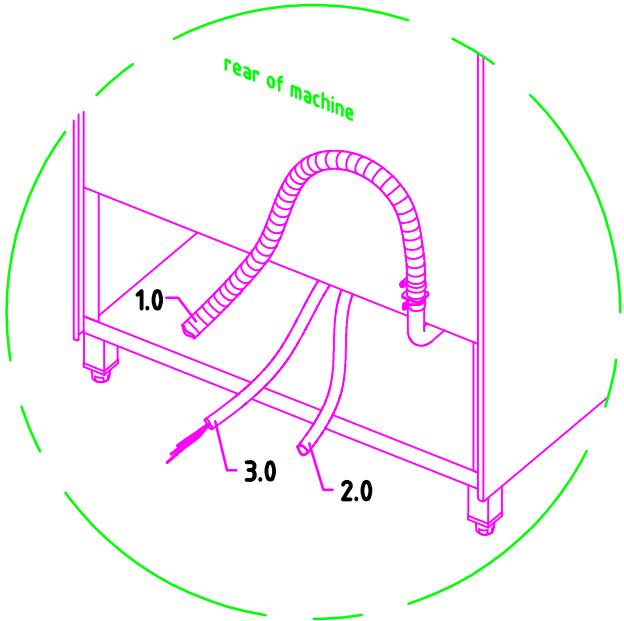
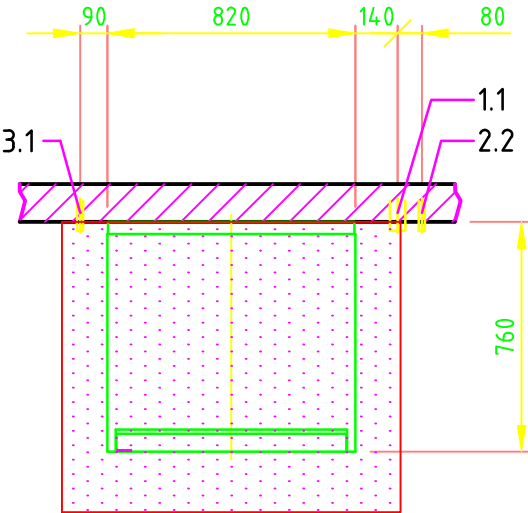
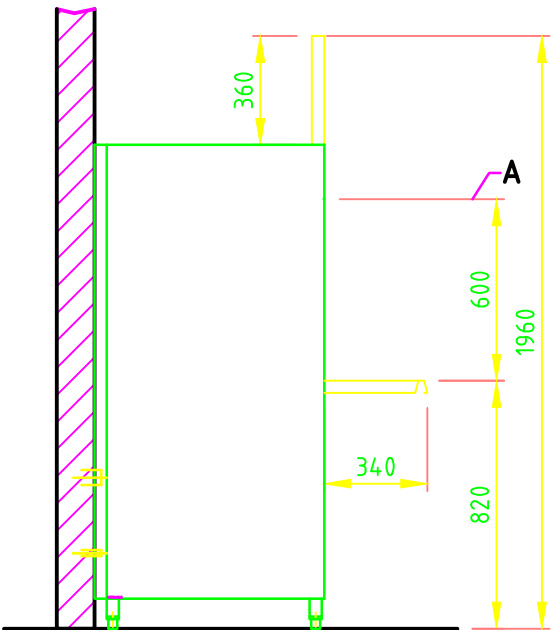


1.0	machine connection: Drain line hose fitted as odour trap in interior of machine	DN 22
1.1	drain (drain pump required from a height of 300 mm)	DN 50
2.0	machine connection: fresh water line	G 3/4"
2.2	soft cold water 10°C max. 0,54 mmol/l CaCO ₃ / 53,4 ppm/CaCO ₃ (max.3°GH) approx. water flow rate 4 l/min min. flow pressure: 60 kPa / 0,6 bar upstream of the solenoid valve, maximum pressure: 500 kPa / 5 bar stopcock and fine screen ≤ 25 µm	DN 15
		G 3/4 a
3.0	machine connection: electricity connecting cable	5G 2,5mm ²
3.1	electricity supply to the machine nominal current / - capacity ⚡ Voltage equalising cable	3N PE 400V~ 50Hz
		18.5 A 11.2 kW
		Fuse protection: 20 A
heat load of the wash room in case of 15 program cycles /h		total ca.2.8 kW
		perceptible ca.1.9 kW
		latent ca.0.9 kW
all cables, pipes etc leaving machine		1,6 m
the position of the connection piping can also be mirror-inverted		
Machine Equipment		
(A) Entry height		
Final rinse dosing unit with suction lance (blue connector)		
Detergent pipe and suction lance		
Booster pump		
Drain pump		
	Recommended suction area according to German VDI 2052 or any local regulations have to be observed to determine ventilation of wash areas	

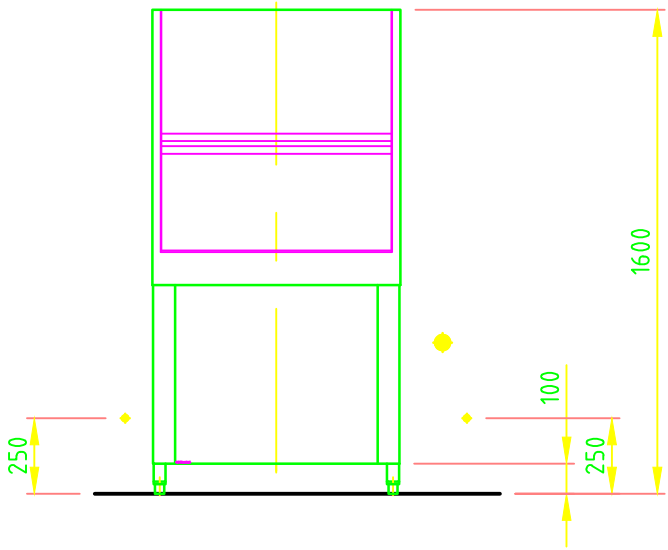

 MEIKO Australia-Pacific Pty Ltd Unit 4, 72 - 74 Gibbes Street Chatswood NSW 2067 TEL. +61-1300 367 730, Telefax +61-1300 656 420 E-MAIL: info@meiko.com.au		Revision		
		Reference	DISHWASHER STANDARD DRAWING / NZL	
This drawing may not be neither passed to third parties for their information or copied or used for competitive purposes without our consent. All rights reserved. We reserve the right to make changes resulting from technical progress. This drawing was computer generated and is not subject to the checking and any release process; it is also not subject to change management. Please note: This document is only valid in conjunction with the conditions defined in Supplementary Sheet "Important Information". These can be requested from the manufacturer or downloaded from the PartnerNet.		Type	UPSTER PF 600	
		Drawing-No.	S00088357	
Scale		drawn:	checked:	
1:25		11.08.2020 m-iplan	11.08.2020 m-iplan	