


1.0	machine connection: drain connection hose, DN 22 hose fitted as odour trap in interior of machine
1.1	drain (recommended height 70 mm, over 100 mm waste water pump required), DN 50
2.0	Machine connection: fresh water supply, G 3/4"
2.2	Soft cold water 10°C, DN 20, G 3/4 a max. 0,54 mmol/l CaCO ₃ (max. 3°dH) Flow rate: min. 0,22 l/s at 250 kPa/ 2,5 bar flow pressure Minimum flow pressure: 250 kPa / 2,5 bar in front of solenoid valve Maximum pressure: 500 kPa / 5,0 bar stopcock and fine screen ≤ 25 µm
3.0	Machine connection: electrical connection cable 5G 2,5mm ²
3.1	electricity supply to the machine: 3N PE 400V ~ 50Hz nominal current / - capacity: 12,8 A / 3,7 kW Fuse protection: 16 A ⚡ Voltage equalising cable The master switch must be provided on site
	Electrical equipment suitable for supply voltage: 3N PE 380-415 V 50 Hz / 1N PE 220-240 V 50 Hz
6.0	Heat load of warewash area
6.1	for 15 programme cycles/h total 1,0 kW, perceptible 0,7 kW, latent 0,3 kW
all cables, pipes etc leaving machine 1,6 m	
the position of the connection piping can also be mirror-inverted!	
Machine Equipment	
(A) Entry height	
Rinse agent pipe and suction lance (blue connector)	
Detergent pipe and suction lance	

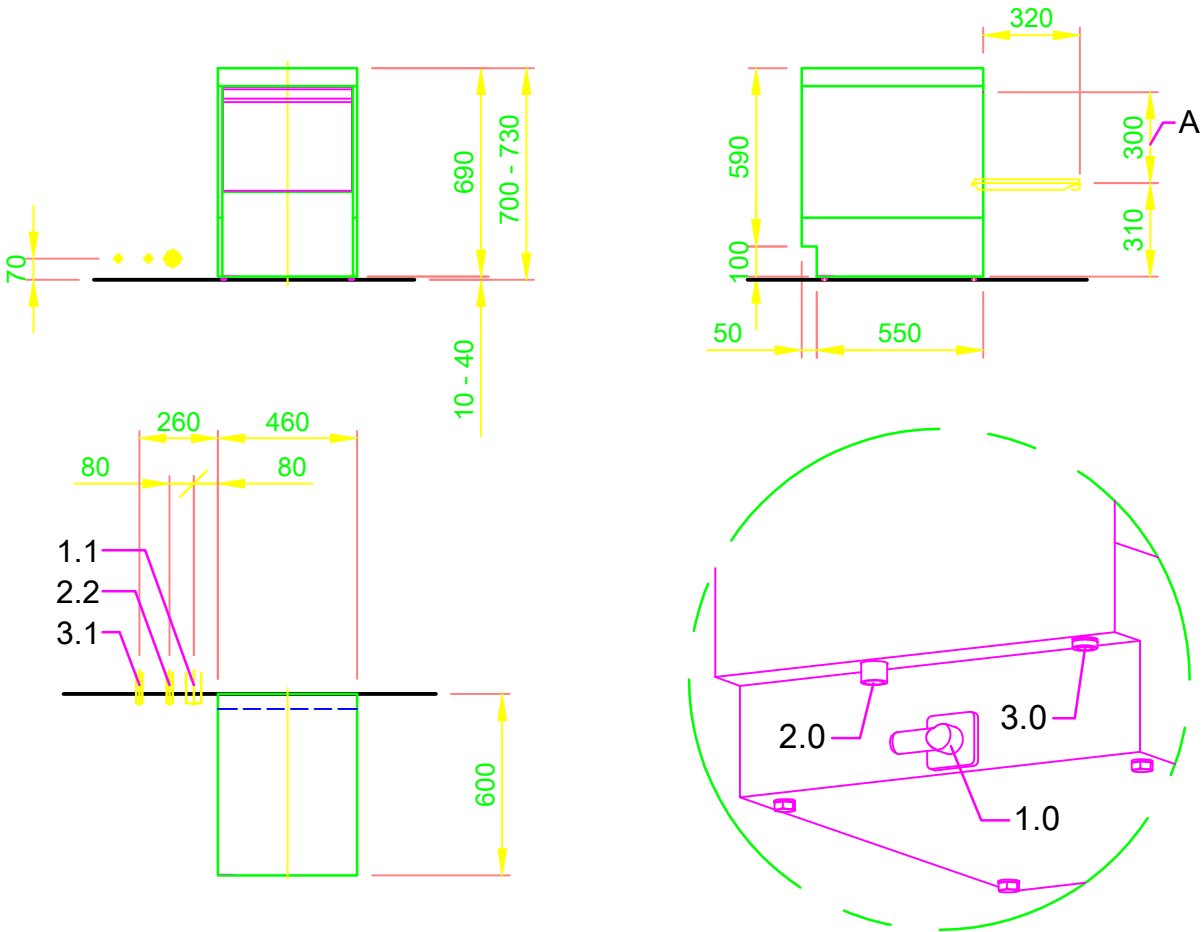

 MEIKO MIDDLE EAST FZE GoldDiamond Park, Building#6, office #206 P.O. Box 282365, U.A.E.-Dubai Phone +971 43 41 51 72 E-MAIL: wat@meiko.de		Revision			
		Reference DISHWASHER STANDARD DRAWING / AFG		Type UPSTER U 400 M2	
This drawing may not be neither passed to third parties for their information or copied or used for competitive purposes without our consent. All rights reserved. We reserve the right to make changes resulting from technical progress. This drawing was computer generated and is not subject to the checking and any release process; it is also not subject to change management. Please note: This document is only valid in conjunction with the conditions defined in Supplementary Sheet "Important Information". These can be requested from the manufacturer or downloaded from the Partnernet.		Drawing-No. S00089965		Order-No.	
		Scale 1:25	drawn: 14.08.2020 m-iplan	checked: 14.08.2020 m-iplan	